

Cámara de Aventuras

EXPLORER de TADEO JONES



Manual de usuario

Funciones

Gracias por elegir esta cámara. Por favor, lea detenidamente el manual antes de usarla, y guárdelo para futuras consultas.

Las imágenes mostradas en el manual, pueden diferir un poco de las del producto, debido a actualizaciones del software.

Precauciones

Esta cámara requiere una tarjeta microSD de clase 6 o superior.

Instrucciones para el uso de la tarjeta de memoria

- En caso de comprar una tarjeta de memoria nueva o de que sea el primer uso, o de que haya datos de otras cámaras, por favor, asegúrese de que formatea la tarjeta primero
- Antes de conectar la tarjeta de memoria, apague por completo la cámara;
- Por favor, no doble la tarjeta de memoria ni la someta a presiones elevadas
- No guarde la tarjeta en entornos con campos electromagnéticos elevados, como cerca de altavoces o televisores
- No use la tarjeta en entornos de temperaturas extremas
- Mantenga la tarjeta de memoria limpia y lejos de líquidos.
- Formatee la tarjeta de memoria, si la ha usado previamente en otras cámaras.

Mantenimiento de la cámara

- Guárdela en un lugar seco cuando no la esté usando
- Si limpia la superficie de la cámara, elimine primero el polvo que pueda haber, soplando la superficie.
No use disolventes para limpiar la lente.
- No toque la superficie de la cámara con los dedos

Requisitos del sistema

Requisitos del sistema	
Sistema operativo	Windows XP, Windows Vista, Windows 7, Windows 8, Mac 10.2
CPU	Intel P III o superior
Memoria	512 MB
Tarjeta de sonido y gráfica	DirectX8 o superior
CD	4X o superior
Disco Duro	Mínimo 1 GB libre



Otros	Puerto USB 2.0
-------	----------------





Funciones

La cámara tiene las siguientes funciones:

- Grabación de Vídeo digital (Full HD 1080p 25FPS)
- Cámara digital de fotos (12 mega-pixel);
- Almacenamiento (Disco Extraíble);
- Web Cam
- Zoom digital 8X

Apariencia

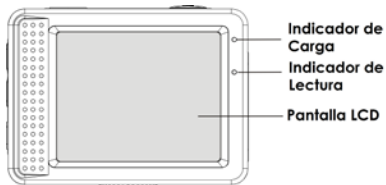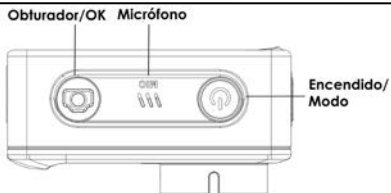

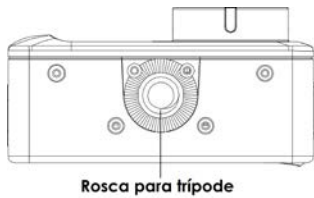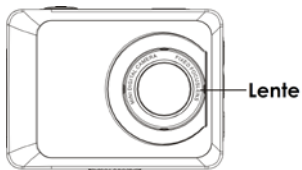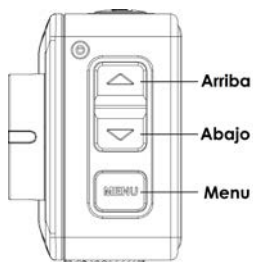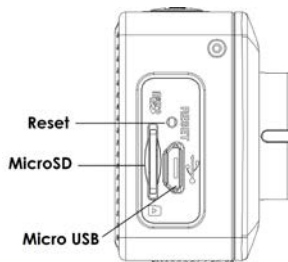

Accesorios

Moto / Bicicleta



Casco





Tenga en cuenta que la videocámara no grabará audio cuando esté dentro de la carcasa acuática.


BOTONES Y FUNCIONES

Tecla/Indicador	Función
Encendido	Enciende y apaga el dispositivo. Cambia entre captura de fotos, grabación de vídeos y reproducción de contenido.
Obturador	Graba video, Reproduce archivos, toma fotografías. Confirma acciones en los menús
MENU	Abre y Cierra los menús
Arriba	Acercar Zoom Digital, Acepta la entrada en un menú (Después de darle a la tecla Menú); sube hacia arriba en el menú de archivos, pausa la reproducción de un vídeo.
Abajo	Alejar Zoom Digital, Acepta la entrada en un menú (Después de darle a la tecla Menú); baja en el menú de archivos
Indicador de carga	Se enciende en rojo durante la carga. Se apaga cuando se ha completado la carga
Indicador de lectura	Se enciende cuando la cámara está ocupada.

Primeros pasos

1.Carga la batería de litio

La cámara está equipada con una batería de 3.7 V.

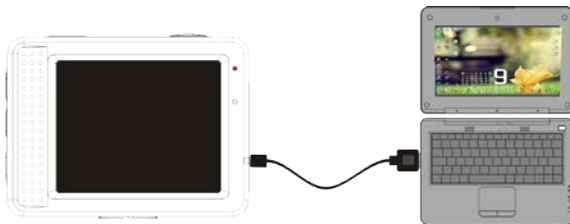


Conecta la cámara APAGADA al ordenador para cargarla. El indicador de carga se iluminará, y se apagará cuando la carga se haya completado (unas 2-4 horas)

2. Cómo usar la tarjeta de memoria

2.1. Inserta adecuadamente la tarjeta microSD en la ranura.

2.2. Para retirar la tarjeta, apriétala hasta que la propia cámara la impulse con su muelle.

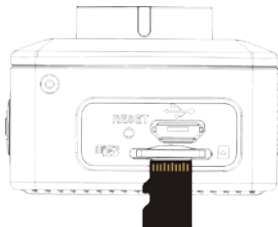

Nota: La cámara no dispone de memoria interna. Por favor, inserta una tarjeta antes de usar la cámara.

3. Arranque y apagado.

3.1 Arranque: presiona el botón de encendido durante 3 segundos

3.2 Apagado: presiona el botón de encendido hasta que se apague la pantalla

3.3 Auto apagado: la cámara se apagará automáticamente cuando pase cierto tiempo. El tiempo por

defecto son 3 minutos.

3.4 Apagado por batería baja: cuando la batería esté a punto de agotarse, la cámara se apagará. Por favor, carga la batería inmediatamente.

4. Cambio de funciones

La cámara dispone de 3 modos distintos: fotografía, grabación de video y reproducción. Usa la tecla de encendido para ir cambiando entre los 3 modos

5. Indicadores

5.1 Indicador de lectura: Cuando la cámara está grabando o tomando fotografías, el indicador se encenderá.

5.2 Indicador de carga: Con la cámara apagada, se encenderá cuando estemos cargando la batería.


6. Modo de fotografías/ grabación de vídeo

Al pulsar el obturador, automáticamente se tomará una fotografía o se empezará a grabar un vídeo. Si pulsamos de nuevo el obturador se parará la grabación del vídeo.


En modo grabación, pulsa arriba o abajo para acercar o alejar el zoom digital.

6.1 Indicadores en pantalla en modo foto

1. Modo foto
2. Resolución
3. Numero de fotos disponibles
4. SD insertada
5. Icono de zoom digital
6. Estado de la batería
7. Nitidez
8. Modo EV
9. Calidad de imagen
10. Balance de blancos
11. Temporizador

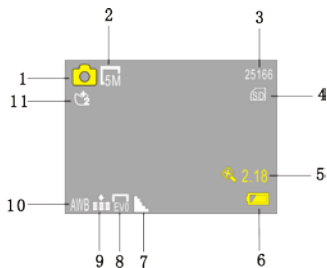

6.2 Indicadores en pantalla en modo vídeo

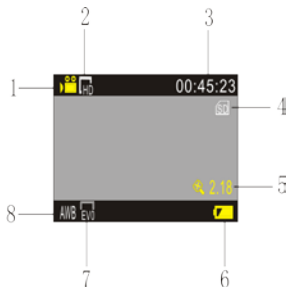


1. Modo vídeo
2. Resolución
3. Tiempo restante en memoria
4. SD insertada
5. Icono de zoom digital
6. Estado de la batería
7. Modo EV
8. Balance de blancos

Nota: Durante la grabación, la pantalla se apagará pasado cierto tiempo para ahorrar batería, pero la grabación continuará. Presiona alguna tecla para reanudar la pantalla


7. Modo Menú de Ajustes

7.1 Pantallas de menús

En cualquiera de los 3 modos, si pulsamos la tecla menú, se abrirá el menú de ajustes. Si pulsamos Arriba o Abajo seleccionaremos el menú resaltado, y con la tecla Obturador, entraremos en dicho menú. El menú seleccionado aparecerá en Amarillo.

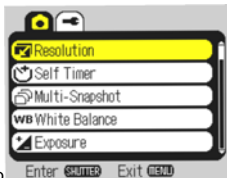

Menú Foto

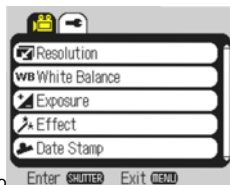


Grabación de video

7.2 Menú de Ajustes de Sistema

Tras pulsar en la tecla Menu, pulsamos Arriba o Abajo para cambiar al menu principal, y pulsamos la recla obturador para aceptar. Presionaremos Arriba o Abajo para elegir un apartado, y presionaremos el obturador para entrar en dicho apartado. En los submenús, pulsamos arriba o abajo para elegir las opciones, y el obturador para aceptar. Pulsamos la tecla menu para salir del menu de ajustes.

Menú de ajustes de sistema

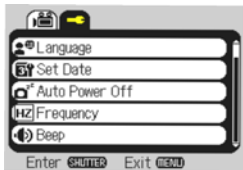

7.3 Ajustando fecha y hora y el idioma.

Presionamos la tecla Menú, y Arriba o Abajo para entrar al menú de Ajustes. Presionamos el obturador para entrar al menú de ajustes de sistema. Pulsamos Abajo hasta llegar a Fecha y hora. Pulsamos el obturador para entrar en el menú de fecha y hora.


En la ventana, pulsaremos menú para seleccionar la fecha o la hora, y presionaremos arriba o abajo para ajustar el número. Pulsaremos la tecla obturador para aceptar y salir. Finalmente saldremos pulsando la tecla menú.

Para ajustar el idioma, pulsamos en Language y elegimos el idioma que queramos.



7.4 Ajustes de reproducción

Presionamos la tecla Menú para abrir el menú reproducción. Presionaremos Arriba o Abajo para seleccionar el menú, y el obturador para entrar. En el submenú, presionaremos arriba o abajo para elegir la categoría, y el obturador para confirmar. Podemos borrar los archivos, protegerlos, girar imágenes...

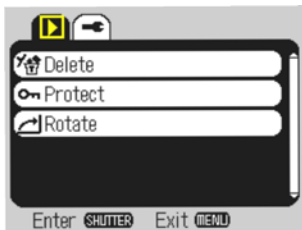

▲ Menu Reproducción

8. Modo Reproducción

Presiona la tecla de encendido para entrar al modo reproducción, y ver las imágenes o vídeos tomados por la cámara.

Presiona arriba o abajo para pasar a la foto siguiente o la anterior.

Reproducción de vídeo: presiona el obturador para reproducir un vídeo o pararlo. La tecla arriba pausa el vídeo.



Reproducción de vídeo

9. Conectar la cámara al PC

Cuando la cámara está encendida y conectada al PC, se comporta como una unidad extraíble, que podremos ver desde Mi PC / Equipo. Las fotos y vídeos se almacenan en "DCIM\100MEDIA".

Podemos copiar, borrar o hacer cualquier cosa con los archivos en la cámara.



Nota: No desconecte el USB durante la copia de archivos, o podría dañar la tarjeta o perder los datos

Características técnicas

Sensor de imagen	5.0 mega-pixel CMOS (interpolación a 12MPx)
Funciones	Grabación, fotografía, reproducción
Lente	F2.5 f=3.53mm
Zoom Digital	8 x
Pantalla LCD	2.0"
Resolución de	12M (4000 x 3000), 8M (3264 x 2448), 5M (2592 x 1944),

imagen	3M (2048 x 1536),2M(1600 x 1200)
Resolución de vídeo	FHD (1920x1080), HD (1280X720)
Almacenamiento	Micro SD (Máximo 32GB)
Formatos	JPEG, MJPG ⁴
Temporizador	2 seg./5 seg./10 seg.
USB	USB 2.0
Alimentación	Batería integrada de 3.7 V de Litio Recargable
Idioma MENU	Inglés / Español /
Auto apagado	1 min. / 3 min./5 min./10 min./Apagado
Requisitos S.O.	Windows XP/Vista/7/8, Mac 10.2
Dimensiones	58x44x23mm

CONDICIONES DE GARANTÍA

1. Para tramitar la garantía será necesario disponer de una copia del ticket de compra.
2. Todos los productos deberán ser entregados a IJOY perfectamente empaquetado y protegido, preferiblemente en su embalaje original junto con todos los accesorios y manuales que el paquete original contuviera. De lo contrario, IJOY no se hará responsable de los daños que pudieran tener lugar durante el transporte.
3. La reparación se llevará a cabo de acuerdo al problema informado por el cliente; Por lo tanto es esencial que el cliente indique de forma clara y en la manera más específica posible en dónde reside el problema, para poder resolverlo de manera correcta. En el caso de que el producto no presentara ningún problema, podría aplicársele un cargo por transporte y diagnóstico.
4. IJOY no asumirá ninguna responsabilidad debida a la perdida de datos o accesorios no originales.
5. En el caso en que no hubiera posibilidad de reparar el producto, podrá ser sustituido por otro de características similares o superiores, considerando el estado en que el producto haya sido recibido, como pudieran ser por ejemplo marcas de uso, arañazos, etc. En cualquier caso el correcto funcionamiento del producto devuelto al cliente habrá sido totalmente comprobado.
6. La Garantía cubrirá solo errores causados por defectos de fabricación, y por tanto no cubrirá daños causados por un uso incorrecto, por modificaciones o daños causados por accidentes de cualquier tipo que haya tenido el cliente. La garantía no cubre: Accesorios, partes expuestas a

un gasto normal por uso. La garantía no será válida cuando el producto no haya sido utilizado con el propósito para el cual fue originalmente concebido.

7. El periodo de garantía comienza en el momento de la compra del producto. La reparación o sustitución del producto no implicará una extensión del periodo de la garantía.

8. En el caso en que el producto no sea cubierto por la garantía, se hará un presupuesto que tendrá que ser aprobado por el cliente. En el caso que el presupuesto no sea aprobado por el cliente, el cliente deberá pagar por los gastos incurridos en el transporte, manipulación y diagnóstico del producto.

9. Una vez que el producto haya sido reparado y después de notificar al cliente, dispondrá de un periodo de 10 días laborables para recoger el producto. Después de este periodo de tiempo, se hará aplicable un cargo diario por almacenamiento que dependerá del volumen/tamaño del producto.

i-Joy

C/ Mario Roso de Luna, 31 - 28022 - Madrid (Spain)

Telf.: +34 91 551 17 87

www.i-joy.es

DECLARACIÓN DE CONFORMIDAD

Por medio de la presente i-Joy Europe International S.L declara que el producto al que este manual hacer referencia cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de las disposiciones de la Directiva 2004/108/CE (2004/108/CE del Parlamento Europeo y del Consejo de 15 de diciembre de 2004)

I-JOY EUROPE INTERNATIONAL, S.L
B86300548

Declaramos bajo nuestra exclusiva responsabilidad la conformidad del producto:

Nombre de Producto: Videocámara deportiva

Modelo: Cámara EXPLORER

Marca: i-Joy

País de fabricación: China



Madrid, a 16 de octubre de 2014

Cámara de Aventuras

EXPLORER de TADEO JONES



User manual

Function

Thank you for choosing this camera. Please carefully read the manual before using, and keep it at a safe place for future reference.

The compilation of the user manual refers to the latest information. The manual quotes captured screen displays and graphics, with the aim to introduce the digital camera through detailed and direct methods. Due to the differences of technical R&D and production batch, those captured screen displays and graphics indicated in the manual may be different from that of actual digital camera.

Precautions

TF high-speed card (multimedia memory card) at Class6 or above is required for this camera.

Instructions for using the memory card

- In case of a newly purchased memory card for the first time use, or data available in the memory card unrecognized for the camera or image captured by other cameras, please ensure to firstly format the memory card;
- Before plugging in or out the memory card, please firstly disconnect power supply of the camera;
- After using for many times, performance of the memory card will be lowered. In case of lowered performance, a new memory card is needed to purchase;
- The memory card is a precise electronic device. Please don't bend it and keep it away from falling or heavy load;
- Don't keep the memory card in the environment with strong electromagnetic or magnetic field, like

the place near speaker or receiver of TV;

- Don't use or keep the memory card in environment with over high or low temperature;
- Keep the memory card clean and away from contacting liquid. In case of contacting liquid, please dry it with soft cloth;
- In case of keeping the memory card idle, place it into the card sleeve;
- Please note that the memory card will get hot after long-term use, and this is normal;
- Don't use the memory card having used on other digital cameras. If to memory card on this camera, please firstly format it with the camera;
- Don't use the memory card having formatted on other camera or card reader;
- In case of one of the followings with the memory card, the recorded data may be damaged:
 - Improper use of the memory card;
 - Disconnect power supply or take the memory card out during recording, deleting (formatting) or reading;
- You are recommended to backup important data on other media like soft disk, hard disk, CD.

Camera Maintenance

- Keep it in a dry and dark place for keeping idle;
- Use proper protective cover to avoid lens and display scratched;
- In case of cleaning the surface of camera lens, first blow the dust off the surface, use a cloth or paper available to optical equipment to wipe the lens gently. Use the professional camera cleanser to

- clean the lens. Do not use any organic solvent;
- Do not touch the lens surface by fingers.

System requirements

When operating or using the digital camera, please take minimum system requirements for the computer of the camera into consideration. You are strongly recommended to use better computer equipment for operating the camera to achieve the optimized effect. The minimum system requirements are as below:

System requirements	
Operating system	Windows XP, Windows Vista, Windows 7, Windows 8, Mac 10.2
CPU	Intel PIII667 or above or CPU with equal performance
Memory	512 MB or above
Sound card and graphics card	Support DirectX8 or above
CD driver	4X speed or above



Hard disk	Minimum 1 GB free space
Others	1 standard USB 2.0 port





Function Features

This camera is equipped with various characteristics and functions:

- Digital VDR;
- Digital camera (5 mega-pixel);
- Mass Storage (Removable disk);
- PC Camera;
- 8X digital zoom

Appearance

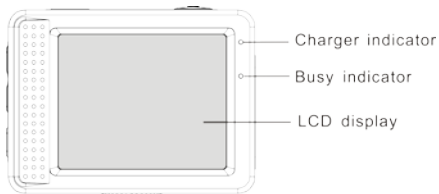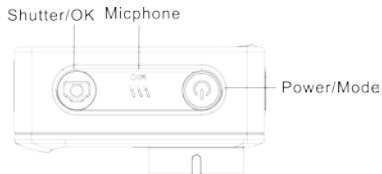

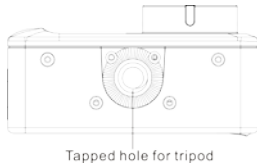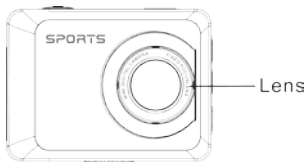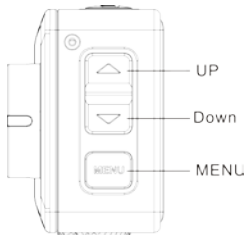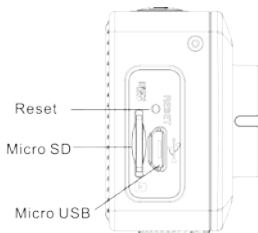

Accessories

Moto / Bike



Helmet





Please, note the camera won't record audio while it is inside the waterproof case.


Key Functions and Indicators

Key/Indicator	Function
Power key	Power On/Off; switch over among video recording, capturing and playback
Shutter key	Video recording/capturing; play/stop playing video file (Playback mode); menu confirmation
MENU key	Open and exit from menu
Up key	Digital zoom-in: select menu (after opening the menu); file page-up; pause playing video (playback mode);
Down key	Digital zoom-out: select menu (after opening the menu); file page-down (after picture zoom-out in playback mode)
Charger indicator	Indicator lights in red during charging, and the indicator turns off after charging full.
Busy indicator	When the camera is busy (for example: during film recording, capturing, automatic screen-off), the busy indicator will light.

Start to use

1.Charge the built-in lithium battery


The camera is equipped with built-in 3.7V lithium battery. Please ensure power available for the camera and timely charge it in case of low battery.

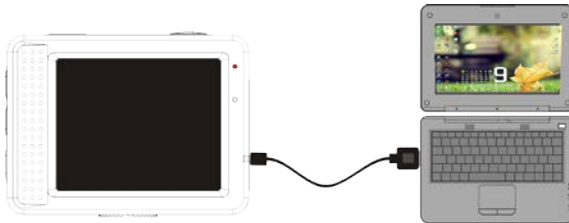

—Connect the camera to computer for charging under shutdown status. The charging indicator will be on when charging, and will be off when the battery is fully charged. Generally, the battery can be fully charged after 2-4 hours.

2. How to use the memory card

- 2.1. Properly insert the TF card into the card holder as per the instructions indicated near the card holder.
- 2.2. To remove the TF card, press the end of memory card gently, the card will be ejected.

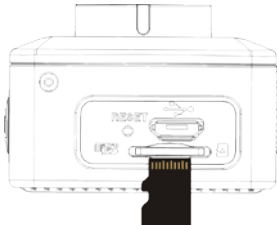


Note: The camera is not equipped with built-in memory. Please insert memory card before using. Before using the camera, it is a must to format the memory card on the camera.

3. Startup and shutdown:

- 3.1 Startup: press the POWER key for 3 second, the camera will show startup screen and enters into POWER ON state;
- 3.2 Shutdown: press the POWER key when the camera is under idle mode to shut down;

3.3 Auto shutdown: the camera will be shut down automatically when the camera is under idle mode for a certain time to save power. The default time for auto shutdown is 3 min.

3.4 Shutdown under low power: when the battery is under low power, the LCD will indicate “”.
The icon is a battery symbol with a diagonal line through it, indicating low power.

Please charge the battery timely. When the icon turns red and flashes, the camera will be shut down automatically.

4. Function modes switching

The camera has 3 modes: photo mode, recording mode, and playback mode. Use the power key to switch the modes after starting up.

Recording mode: for recording videos;

Photo mode: for taking photos;

Playback mode: for playing back the current video.

5. Indicators

5.1 BUSY indicator: When the camera is working (e.g. recording, photographing, auto screen off etc.), the indicator will light;

5.2 Charging indicator: In shutdown state, the lightened indicator means the user is charging the camera.

6. Photo/recording mode


It enters automatically into recording mode.

Press Shutter to start recording, and press Shutter again to stop recording.

Press Shutter to directly take photo.


In rerecording/photo mode, press Up/Down for digital zoom in/out.

6.1 Screen display in photo mode

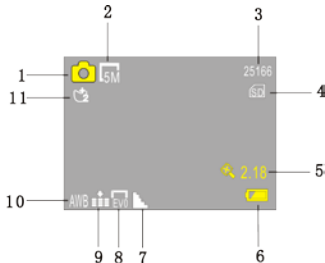

1. Photo mode;
2. Photo resolution;
3. Available shooting count;
4. Insert SDcard ;
5. Icon of digital zoom;
6. Battery state;
7. Sharpness mode;
8. EV value mode
9. Photo quality
10. White balance mode;
11. Self-timer mode.

6.2 Screen display in recording mode

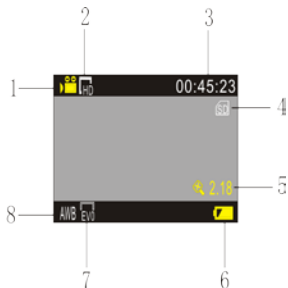

1. Video mode;
2. Video resolution;
3. Available time to record;
4. Insert SDcard;
5. Icon of digital zoom;
6. Battery state;
7. EV value mode;
8. White balance mode.

Note: Automatic screen-off will be performed during recording for saving power.

User may short press Power key to enable the screen for displaying.

7. Menu Setting Mode

7.1 Menu display

In photo, recording and playback mode, press Menu key to open the menu, and then press Up/Down key to select menu, press the Shutter key to enter submenu. When selecting menu, the selected menu will be displayed with yellow background.


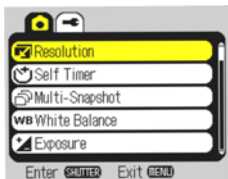



Photo menu mode

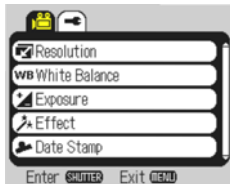

Recording menu mode

7.2 System mode menu setting

After opening the menu by pressing Menu key, press Up/Down key to switch over to setting main menu, press Shutter key for confirmation, and then press Up/Down key to select menu, and after that to press Shutter key for confirming to enter the submenu. In the submenu, press Up or Down key to select menu, and press Shutter to confirm. After returning to the main menu, press Menu key to exit from the menu.

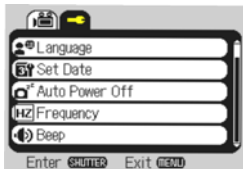

System menu mode

7.3 Setting date and time

Press Menu key to open the menu, press Up/Down key to switch to setting menu, and then press Shutter key to confirm. Press Down key to select “Date and time” in menu item, and then press Shutter key to enter setting window.


In setting window, press MENU key to select items (date, time) to be adjusted, and then press Up key or Down key to make adjustment, press Shutter key for conformation at completion of adjustment, or press Menu key to cancel setting and exit. Finally, press Menu key to exit from setting mode.



7.4 Playback mode menu setting

Press Menu key to open playback main menu, press Up or Down key to select menu, press Shutter key to enter submenu. In the submenu, press Up or Down key for selection, and press Shutter key

to confirm. After returning to the main menu, press Menu key to exit from the menu.

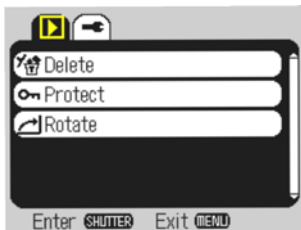

▲ Playback menu

8. Playback mode

Press Power key to enter playback mode to browse photo/video, play the video recorded by this camera.

Press Up/Down key to access to previous or next photo/video.

Play movie: press Shutter key to start/stop playing video, press Up key to pause playing the video.



Video file playback



Video pause mode

9. Connect to computer to download photo/video


When the camera is connected with the computer and entering removable disk mode, there will be a removable disk added in the window of "My computer". The photo or video file may be stored in the catalogue of "DCIM\100MEDIA" in the removable disk. You may enter this catalogue to copy files on to hard disk of your computer.




Note: During file downloading, it is prohibited to disconnect USB connection, and plugging out the memory card when USB connected is also prohibited to avoid loss of — data.

Use camera functions

After connecting the camera to the computer, while pressing and holding MENU key, press the Power key to start up the camera to enter mode of camera.

Before using the camera functions, after connecting the camera with the computer to enter the mode of camera, click this shortcut icon ( Amcap) to open AMCAP window. The corresponding image of video of the camera shall be displayed in the AMCAP window. When AMCP software is not enabled, with camera function, you may transmit video with the network.

Note: In case of PCCAM, version 1 is XP sp3 or the above.

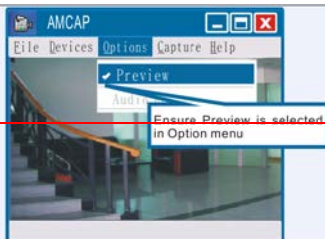

Technical parameters

Image sensor	5.0 mega-pixel CMOS image sensor
Function mode	Recording, photo, playback
Lens	F2.5 f=3.53mm
Digital zoom	8 x
LCD screen	2.0" LCD screen
Picture resolution	12M (4000 x 3000), 8M (3264 x 2448), 5M (2592 x 1944)
Video resolution	FHD (1920x1080), HD (1280X720)
Storage medium	TF card (Maximum supporting 32GB)
File format	JPEG, MJPG 4
Self-timer delay	2 sec./5 sec./10 sec.

USB port	USB 2.0
Power supply	Built-in 3.7V rechargeable lithium battery
Menu language	English/France/Spain
Auto shutdown	1 min. / 3 min./5 min./10 min./OFF
Operating system requirements	Windows XP/Vista/7/8, Mac 10.2
Dimensions	58x44x23mm

Note: The product design specification is made based on updated information when compiling this product manual. The specification is subject to change without further notice. The product is subject to the actual camera.

Conditions of Guarantee

1. To be able to carry out the guarantee it will necessary to have a copy of the proof of purchase, preferably with a copy of the original bill.
2. For the guarantee to be carried out, all products must be delivered to iJoy perfectly packed, preferably in its own original packing, with all accessories, user manuals and drivers that the packaging would originally contain. Otherwise, iJoy will not be held responsible for damages that might occur during transportation.
3. The repair of the products will be carried out according to the problem reported by the client; therefore it is essential that the client indicates in a clear form and in the most specific way possible where the problem lies, to be able to solve it in the correct manner. In the case that there is not problem with the product a diagnosis and transportation charge can be applied.
4. In any case iJoy will not be held responsible for the loss of data contained in hard drives, as well as any other non–original accessory.
5. In the case that there is no possibility of repair of the product, it can be replaced by another one of similar or superior characteristics, taking into consideration the state in which the product is received, such as usage marks, scratches, etc. In any case the product returned to the customer will have been tested to be functioning correctly.
6. The Guarantee will only cover errors caused by deficiencies in manufacturing, and does not therefore cover damage caused by mis-use, modifications or damages caused by accidents of any nature of caused by the client. The guarantee does not cover: Accessories, pieces exposed to normal

wear and tear. The Guarantee will not be valid when the product is not used for the purpose for which it was originally conceived.

7. The guarantee period starts in the moment of first purchase of the product. The reparation or substitution of the product will not imply an extension of the guarantee period.

8. In the case that the product is not covered by the guarantee, a budget will be drawn up which has to be approved by the client. In the case that the budget is not approved by the client, the client must pay for the cost incurred in the transportation, manipulation and diagnosis of the product.

9. Once the product is repaired after notifying the client, the client will have a period of ten working days to pick up the product. After this period of time, a daily storage charge will be applicable depending on the volume of the product.

i-Joy

C/ Mario Roso de Luna, 31

28022 - Madrid (Spain)

Tel.:+34 91 551 17 87

www.i-joy.es

DECLARACIÓN DE CONFORMIDAD

I-JOY EUROPE INTERNATIONAL, S.L

C/ MARIO ROSO DE LUNA, 31

28022 - MADRID, ESPAÑA

TEL: +34 91 551 1787

B86300548

We declare, under our own exclusive responsibility that the product to which this manual refers, is in compliance with the essential norms and standards of the Directive 1999/5/CE of the European Parliament and of the Council of March 9th 1999.

Product: Sport videocamera

Model: Explorer

Brand: i-Joy

Manufacturing country: R.P:C.



Madrid, 16th October 2014

i-Joy Europe International, S.L

Pol. Ind. Fin de Semana

C/ Mario Roso de Luna, 31

28022 - Madrid (Spain)

www.i-joy.es

Tel: +34 91 551 17 87

